


Tilo Dedinski
Heugasse 10
Germany - 95326 Kulmbach
Phone +49 9221- 66782
www.dedinski.com



Anfertigung individueller
Vorderladerwaffen für
den gehobenen Anspruch

Instructions for dismantling underhammer pistol "Billinghurst"

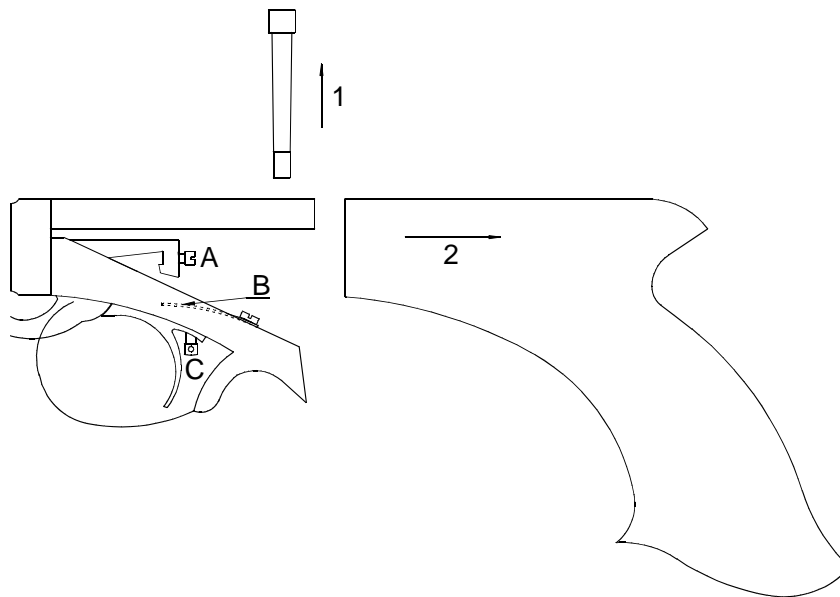

A = trigger adjustment screw
B = trigger spring
C = triggerstop

screw A counter clockwise = deeper notch
screw A clockwise = shorter notch

Dismantle the grip:

To dismantle the grip, remove the cross screw (1) and pull off the handle to the rear as a 2nd step.

Adjusting the detent overlap:

Adjust screw A so that the trigger just holds (on the last edge, so to speak). Then turn this screw counter clockwise only minimally to ensure that the trigger releases dry and holds securely.

If you turn this screw too far, the trigger will creep.

Adjusting the trigger weight:

To adjust the trigger weight it is necessary to bend the bent trigger spring (B).

Increase the trigger weight = bend the spring more.

Decrease the trigger weight = stretch the spring a little.

Please note that bending should only be done in small steps. Bending back and forth several times can cause the spring to break!