


Tilo Dedinski
Heugasse 10
Germany - 95326 Kulmbach
Phone +49 9221- 66782
www.dedinski.com



Anfertigung individueller
Vorderladerwaffen für
den gehobenen Anspruch

instructions for dismantling underhammer rifle Billingham Vetterli and Whitworth

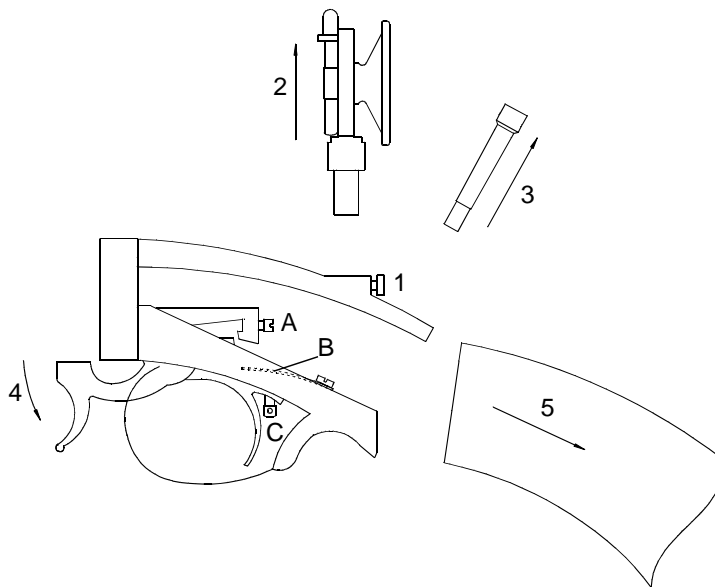

A = trigger adjustment screw
B = trigger spring
C = triggerstop

screw A counter clockwise = deeper notch
screw A clockwise = shorter notch

Dismantle the stock:

To dismantle the stock, loosen screw 1 and pull out the sight upwards (2). Next, remove the cross screw (3), cock the hammer (4), secure it against accidental release, and pull the stock off to the rear (5).

Adjusting the detent overlap:

Adjust screw A so that the trigger just holds (on the last edge, so to speak). Then turn this screw anticlockwise about 1/12 of a turn to ensure that the trigger releases dry and holds securely. If you turn this screw too far, the trigger will creep.

Adjusting the trigger weight:

To adjust the trigger weight it is necessary to bend the bent trigger spring (B).

Increase the trigger weight = bend the spring more.

Decrease the trigger weight = stretch the spring a little.

Please note that bending should only be done in small steps. Bending back and forth several times can cause the spring to break!